



## Using the Hot Air Gun

1. Wear the protective equipment including ear defenders and goggles.
2. Removing paint and varnish with a hot air gun will produce toxic fumes. Wear a facemask, keep others away from the fumes.
3. Do not point the hot air gun at people. It will cause burns.
4. Do not direct hot air on to glass it will crack. Some plastics will crack and splinter before melting.
5. Remember material that has been worked on will remain hot for some time. Make sure no-one touches it.
6. Switch off the hot air gun and unplug before making any adjustments. Remember the nozzle will be hot.
7. Take care not to accidentally pull the plug from the socket.
8. Switch off and remove the plug then put the machine down in a safe place to cool before leaving unattended.
9. Keep the cable out of the way.
10. If it is suspected that the cable may be cut or damaged in any way, switch off and unplug at the mains before inspecting it. If the cable attached to the hot air gun is damaged, stop using the machine. Contact the hire company. If an extension cable has been damaged do not use it again.
11. If the equipment does not work properly do not attempt to repair it. Contact the hire company.

Please keep this leaflet safely as it may be required for future reference



Hire Association Europe  
2450 Regents Court  
The Crescent  
Birmingham Business Park  
Solithull B37 7YE

Telephone: 44 (0) 121 380 4600  
Fax: 44 (0) 121 333 4109  
Email: [mail@hae.org.uk](mailto:mail@hae.org.uk)  
website: [www.hae.org.uk](http://www.hae.org.uk)

The rules and procedures in force where people are at work may require the person responsible for this equipment to carry out a specific risk assessment.

### It is important to read this entire leaflet BEFORE using the Hot Air Gun

1. Electricity is dangerous and must always be used with great care.
2. Removing paint, especially lead paint, is hazardous. Wear a facemask. Do not allow others to breathe the fumes.
3. This hot air gun is designed for paint stripping, moulding special plastics, thawing frozen water pipes and similar tasks.
4. The action of this hot air gun can cause injury if not used in a careful and controlled way.
5. If the operator has not used a hot air gun before, they should familiarise themselves with the machine on some straightforward work before starting the main task.
6. The work should be thought out and planned ahead to ensure that it is carried out safely.
7. The following items of personal protective equipment must be worn as a minimum:  
Goggles : EN166 or BS2092;  
Ear muffs or plugs giving protection for levels up to 101 dB(A);  
Facemask – a minimum of EN149 ffp2(s) protection;  
Gloves;  
Rcd if using a 230v (mains) supply.
8. This machine must not be used by minors, or by anyone under the influence of drugs or alcohol.
9. This hot air gun is designed for operation by an able-bodied adult. Anyone with either temporary or permanent disability must seek expert advice before using it.



Any unauthorised reproduction or electronically – manually or – is STRICTLY prohibited



Every effort has been made by HAE/EHA to ensure that the information given in this document and supporting material is accurate and not misleading. HAE/EHA cannot accept responsibility for any loss or liability perceived to have arisen from the use of any such document/material. Only Acts of Parliament and Statutory Instruments have the force of law and only the courts can authoritatively interpret the law.

should be used, not longer than 50 meters (160 feet). The extension cable must only be used between the transformer and the machine. The extension cable should be laid out carefully avoiding liquids, sharp edges, doorways or windows where it might be trapped, and places where vehicles might run over it. It should be fully unrolled or it will overheat and could catch fire. Make sure that extension cable connections are dry and safe.

1. Plug a residual current device (RCD) into the socket. Plug the machine into the RCD according to the instructions supplied with it. If an extension cable is needed, follow any special instructions given by the hire company. Do not use special instructions, only a suitably rated heavy duty cable, not longer than 50 metres (160 feet) should be used. Plug it directly into the RCD.
2. The extension cable should be laid out carefully avoiding liquids, sharp edges, doorways or windows where it might be trapped, and places where vehicles might run over it. It should be unrolled fully or it will overheat and could catch fire. Make sure that extension cable connections are dry and safe.

### BEFORE STARTING WORK...

1. If using a portable transformer, plug the transformer directly into the 230 volt socket. Do not use any 230 volt extension cables.
2. If an extension cable is needed, follow any instructions given by the hire company. Do not use special instructions, only a suitably rated heavy duty cable, not longer than 50 metres (160 feet) should be used. Plug it directly into the RCD.
3. The extension cable should be laid out carefully avoiding liquids, sharp edges, doorways or windows where it might be trapped, and places where vehicles might run over it. It should be unrolled fully or it will overheat and could catch fire. Make sure that extension cable connections are dry and safe.

### 230 VOLT EQUIPMENT (SQUARE PIN OR BLUE PLUG)

1. Plug a residual current device (RCD) into the socket. Plug the machine into the RCD according to the instructions supplied with it. If an extension cable is needed, follow any special instructions given by the hire company. Do not use special instructions, only a suitably rated heavy duty cable, not longer than 50 metres (160 feet) should be used. Plug it directly into the RCD.
2. The extension cable should be laid out carefully avoiding liquids, sharp edges, doorways or windows where it might be trapped, and places where vehicles might run over it. It should be unrolled fully or it will overheat and could catch fire. Make sure that extension cable connections are dry and safe.

### 110 VOLT EQUIPMENT (YELLOW PLUG)

1. If using a portable transformer, plug the transformer directly into the 230 volt socket. Do not use any 230 volt extension cables.
2. If an extension cable is needed, follow any instructions given by the hire company. Do not use special instructions, only a suitably rated heavy duty cable, not longer than 50 metres (160 feet) should be used. Plug it directly into the RCD.
3. The extension cable should be laid out carefully avoiding liquids, sharp edges, doorways or windows where it might be trapped, and places where vehicles might run over it. It should be unrolled fully or it will overheat and could catch fire. Make sure that extension cable connections are dry and safe.

### ELECTRICAL SAFETY

The machine will only operate on one 110v machines will have a yellow square pin plug fitted, or a blue industrial 230v machines will have either a normal square pin plug fitted, or a blue industrial plug.

Read the instructions below for the machine being used.

1. Check the machine, cables and plugs. If anything is found to be damaged, do not use the hot air gun. Contact the hire company.
2. Check that the plug on the machine matches the supply. Connections should not be forced or improvised.
3. Machines with a cylindrical yellow industrial plug fitted are designed to run off a special 110v supply. The hire company will have provided a portable transformer if the machine is to be powered from a normal mains 230v supply. If a portable transformer has been supplied, take care when moving it about – it may be heavier than it appears. Machines designed to run directly from a 230v mains pin plug fitted, or a normal square pin plug fitted, or a blue industrial plug.
4. Removing paint and varnish with a hot air gun will produce toxic fumes. A face mask must be worn – keep others away from the fumes.
5. Be careful where the hot air is directed. It will burn people or animals. It will crack glass and melt plastic.

1. Do not use this hot air gun where there is a danger of explosion, or gas ignites fumes from petrol, or gas cylinders.
2. Make sure that the area is clear and safe and that no-one is nearby who could cause a distraction.
3. Protect others from the noise and danger. Warm others to keep away.
4. Do not use this hot air gun in the rain or where it may get wet.

### OPERATORS

1. The following items of personal protective equipment (ppe) are the minimum that should be worn when using this machine. Particular jobs or environments may require a higher level of protection.
2. When removing paint or doing work that creates fumes an appropriate face mask must be worn with a minimum of EN149 ffp2(s) protection.
3. Goggles must be worn when working with this hot air gun (EN166 or BS2092).
4. This equipment is likely to cause noise levels up to 101 dB(A) – appropriate ear muffs or plugs giving hearing protection for this level must be worn as a minimum.
5. Anybody who is working nearby will also need to wear appropriate personal protective equipment. Do not let others touch it. Dispose of it sensibly. Hands must always be washed after handling lead paint.

### WORK AREA

1. If stripping paint off an old building, the bottom layers of paint may contain lead.
2. Lead paint should not be burnt off: it will produce poisonous fumes.
3. Wear a facemask.
4. It is possible to very carefully warm the lead paint up to soften it without burning it. It can then be scraped off and disposed of carefully.
5. Do not allow the scraped paint anywhere near the mouth. Do not let others touch it. Dispose of it sensibly. Hands must always be washed after handling lead paint.

Copyright Hire Association Europe April 2011

### LEAD PAINT

1. If stripping paint off an old building, the bottom layers of paint may contain lead.
2. Lead paint should not be burnt off: it will produce poisonous fumes.
3. Wear a facemask.
4. It is possible to very carefully warm the lead paint up to soften it without burning it. It can then be scraped off and disposed of carefully.
5. Do not allow the scraped paint anywhere near the mouth. Do not let others touch it. Dispose of it sensibly. Hands must always be washed after handling lead paint.

### HOT AIR GUN

1. Check the machine, cables and plugs. If anything is found to be damaged, do not use the hot air gun. Contact the hire company.
2. Check that the plug on the machine matches the supply. Connections should not be forced or improvised.
3. Machines with a cylindrical yellow industrial plug fitted are designed to run off a special 110v supply. The hire company will have provided a portable transformer if the machine is to be powered from a normal mains 230v supply. If a portable transformer has been supplied, take care when moving it about – it may be heavier than it appears. Machines designed to run directly from a 230v mains pin plug fitted, or a normal square pin plug fitted, or a blue industrial plug.
4. Removing paint and varnish with a hot air gun will produce toxic fumes. A face mask must be worn – keep others away from the fumes.
5. Be careful where the hot air is directed. It will burn people or animals. It will crack glass and melt plastic.