



LOADING NAILS

- 1. Use only nails or other fasteners that have been supplied or specified by the hire company. If you need different nails, contact the hire company
- Do not operate the trigger, or have the yoke depressed while loading or unloading.
- Holding the tool by its handle in your right hand, align the heads of the nails with the silver channel in the rear of the magazine and insert one or two strips.
- Push the nail strips forward.
- Squeeze the release level and pull the follower ring to the rear of the magazine until the follower passes the last of the
- Release the follower and let it push the nails forward into the nose of the tool.
- As the fasteners are used, the strip will be pushed along. The indicator at the side of the magazine will show when the tool requires reloading.
- When there are approximately 10fasteners left a safety mechanism will prevent further operation. Reload a fresh strip of fasteners

USING THE CORDLESS NAILER

- 1. Wear your protective equipment including goggles and ear defenders.
- Do not carry a loaded nailer around: unload the fuel cell and battery first.
- To fix a nail, press the work-contact element against the workpiece, and pull the trigger.
- This equipment will drive two to three nails per second, or up to 500 per hour. Do not try to force it to work faster - it will damage
- When working close to the edge of your timber take care not to split it.
- When you have finished work, unload and clean the cordless nailer and store it and the fuel cells, battery and fasteners
- If your equipment is not working properly or appears to be faulty, do not attempt to repair it. Contact the hire company.

Please keep this leaflet safely. It may be required for further information







2450 Regents Court The Crescent









44 (0) 121 333 4109

©Copyright Hire Association Europe April 2011

Any unauthorised reproduction - manually or electronically - is STRICTLY prohibited

cool, well-ventilated and safe location. Charging should be carried out in a dry, when charging some types of batteries. 11. Toxic and flammable fumes are produced socket. Plug the charger into the rcd.

10. If you have an rcd, plug it into the 230- volt by the nire company.

supplied, following the instructions give Recharge the battery only with the charger recnarging.

The battery must be removed battery is flat and needs recharging. A continuous red light shows that the

that battery is charged ready for use. depressed, a continuous green light show When the work-contact element rne barrery.

red, the battery is flat: you should recharge depressed, a flashing green light shows that the battery is in tool. If the light flashes When the work-contact element is not condition of the battery.

display either red or green to indicate the The light emitting diode in the handle will

the battery. equipment upside down to insert or remove The battery compartment is located on the right side of the magazine. Hold the

by the hire company. ednibueur se subbiled or recommended Use only the correct batteries for your

Remove the battery if the tool is not being inserted even it the tool is not being used. The battery will slowly discharge while

YABITIA8

cell does not move. Shut the compartment, making sure the fuel :laidene

valve into the Yellow aperture in the **6.** Load the fuel cell in so that the metering valve goes in last. Locate the stem of the

towards the back of the handle. cover inwards then swinging it down The fuel cell compartment is located at the back of the nailer. Open it by pressing the

the cell until it clicks twice. It is now ready

down, and then push the back down onto Push the front of the valve forwards and cell with the front pointing away from you. 4. Put the valve back in position on the fuel rake the cap off the valve by pulling it back remove the valve and cap from the cell, and cell until a hiss of gas is released. Then First, push the valve and cap onto the fuel

cell before you can load the cell. You need to fit the metering valve to the fuel

have been supplied or specified by the hire Use only fuel cells and metering valves that

LOADING FUEL CELLS

start using the equipment. Reload the battery when you are ready to benetration.

machine to adjust the depth of Turn the adjustment wheel near the nose of adjustment is made.

The battery must be removed before any fferent lengths.

depins of penetration, and for fasteners of Its position can be adjusted to for different tool that is pushed against the work piece The work-contact element is the part of the

DEPTH ADJUSTMENT













Paslode IM250

2208 Paslode IM250 - LPG SHC

may require the person responsible for this equipment to carry out a specific risk assessment

Read this entire leaflet before using the Paslode IM250

- This equipment can be hazardous if misused. It should be used carefully and only by trained operators.
- The fuel in the cells is highly flammable; any source of ignition including a lighted cigarette, could be hazardous. Take great care not to cause a fire or explosion.
- Keep non-essential people, especially children away from the work area. Never allow a child to touch the equipment.
- Do not insert a fuel cell, battery, or fasteners until required, and remove them when the equipment is not in use.
- Always keep the nailer pointing away from yourself, and others. Keep your fingers away from the
- Do not allow the work-contact element to be accidentally depressed against your body or any other object.
- Keep the equipment safely in its protective case when it is not in use.
- Do not indulge in any horseplay or irresponsible behaviour, while using, or working near the
- This cordless nailer must not be used by minors, or by anyone under the influence of drugs or
- This equipment is designed for operation by an able bodied adult. Anyone with either temporary or permanent disability must seek expert advice before using it.
- You should wear the following items of personal protective equipment: ear muffs or plugs giving protection for levels up to 98 dBA; impact resistant goggles or face shield and strong work aloves
- You may also need a residual current device (rcd) if charging batteries from a 230-volt mains supply.















Every effort has been made by HAE/EHA to ensure that the information given in this document and supporting materia eading. HAE/EHA control accept responsibility for any loss or liability perc of any such document/material. Only Acts of Parliament and Statutory Ins from the use of any such document/material. Only Acts of Parliament and Statu.

have the force of law and only the courts can authoritatively interpret the law.

> 44 (0) 121 333 4109 44 (0) 121 380 4600

The Crescent Birmingham Business Park noo sinegen uch

BAY 788 Iludilos



protection.

sately with no danger to yourself or others. understand how to use the cordless nailer Before you start work, make sure you onto a fire.

e company. Do not throw empty cells empty cells responsibly or return them to The fuel cell is non-refillable. Dispose of when you have finished work.

adjusting it, or clearing a Jammed nail, and battery from the cordless nailer before You must always unload the fuel cell and even when it is not loaded.

Do not point the cordless nailer at anyone, in its storage box, when not in use. immediate use. It should remain unloaded, into the cordless nailer until it is required for Do not load a fuel cell, battery, or fasteners

:uoisoidxa ncluding a lighted cigarette or the firing of explosive gas. Any source of ignition would rapidly evaporate into a large area of It their escapes from a punctured cell, it

ireproof box, away from any source of Fuel cells must be stored in a secure

anything found damaged - contact the hire and rasteners. Do not use patteries, Check your cordless nailer, fuel cells

CORDLESS NAILER

protective equipment. d to wear appropriate person Anybody who is working near to you will

Strong gloves will help protect your hands. when working with this equipment. Impact resistant goggles, or face shield

елеі аз а тіпітит. or plugs giving nearing protection for this - A8b 8e of qu This cordiess nailer will cause noise levels

environments may require a higher level of should be worn whenever you use the cordless nailer. Particular jobs or equipment (PPE) are the minimum that The following items of personal protective ontself or others.

job to enable you to use it without risk to understanding of the equipment and the if you have adequate knowledge and you should only operate this cordless haller

where there is excessive moisture. Do not use the cordless nailer in the rain or

ble, put barriers around your w danger. Warn others to keep away. Protect other people from the noise and company in this tool.

Only use nails recommended by the hire .gnilisn boow

I uis 1001 suonid only be used 101 wood 10

work in the area when the cordless nailer is distract you. Only essential people should ite and that no-one is near to you or could Make sure that your work area is clear and samut isubaxe

have adequate ventilation to disperse or in confined spaces make sure that you If you plan to use the tool for long periods, ammable liquids and gases.

ire risk from combustible materials, or Do not use this equipment where there is a

WORK AREA

Before Starting Work.